CODE:

TYPE:

Pulsar

EN**

EN54-5A28LCD v.1.0/III EN54 27,6V/5A/2x28Ah/LCD power supply for fire alarm systems



"This product is suitable for the systems designed in compliance with the standards EN 54-4 and EN 12101-10"

Requirements	Requirements according to standards	PSU EN54-5A28LCD
External Power Supply failure indication	YES	YES
Two independent power supply outputs protected against short-circuit	YES	YES
Temperature-compensated battery charging	YES	YES
Measurement of the resistance of the battery circuit	YES	YES
Low battery indication	YES	YES
Deep discharge battery protection	YES	YES
Protection against short-circuit of the battery terminals	YES	YES
Blown battery fuse indication	YES	YES
Charging circuit failure indication	YES	YES
Low output voltage indication	YES	YES
High output voltage indication	YES	YES
Indication of power supply failure	YES	YES
Overvoltage protection	YES	YES
Short-circuit protection	YES	YES
Overload protection	YES	YES
Output of collective failure ALARM	YES	YES
EPS technical output	YES	YES
APS technical output	YES	YES
PSU technical output	-	YES
Input of an external failure indication EXTi	-	YES
Controlled relay output EXTo	-	YES
Remote battery test	-	YES
230V AC mains supply voltage measurement	-	YES
LCD optical indication	-	YES
Tamper indicating enclosure opening	-	YES

EN54/LCD series power supply unit Power supply for fire alarm systems 27,6V DC



PSU features:

- In accordance with standards: EN 54-4, EN12101-10
- 27,6V DC/ 5A uninterruptible power supply
- battery housing for two 28Ah/12V batteries
- independently protected outputs AUX1 and AUX2
- high efficiency 84%
- low level of voltage ripple
- microprocessor-based automation system
- intelligent PSU overload protection
- measurement of the resistance of the battery circuit
- automatic temperature-compensated charging
- battery test
- two-stage battery charging process
- accelerated battery charging
- monitoring of the continuity of the battery circuit
- monitoring of the battery voltage
- monitoring of the battery fuse
- monitoring of charging and maintenance of the batteries
- deep discharge battery protection (UVP)
- battery overcharge protection
- battery output protection against short-circuit and reverse connection
- monitoring of the load current
- output voltage control
- fuse monitoring of AUX1and AUX2 outputs
- 230V AC mains voltage measurement
- "SERIAL" communication port with implemented MODBUS RTU protocol
- free program "PowerSecurity" to monitor the performance of the PSU
- remote control (options: WiFi, Ethernet, RS485, USB)
- remote battery test (required additional modules)

- cooperation with optional EN54-LB4 or EN54-LB8 fuse modules
- optical indication of PSU overload OVL
- acoustic indication of failure
- adjustable delay for 230V AC power loss indication
- output of collective failure ALARM
- input of collective failure EXTi
- controlled relay output EXTo
- technical inputs/outputs with galvanic isolation
- EPS technical output indicating 230V AC power loss
- PSU technical output indicating PSU failure
- · APS technical output indicating battery failure
- internal memory of PSU operating status
- optical indication LCD panel
 - readings of electrical parameters, including: voltage, current, resistance of the circuit, mains supply voltage
 - failure indication
 - configuration of the PSU settings from the control panel
 - two levels of password protected access
 - operation memory of the PSU
 - failure memory
 - real time clock with battery backup
- protections:
 - SCP short-circuit protection
 - OLP overload protection
 - OHP overheat protection
 - OVP overvoltage protection
 - Surge protection
 - Antisabotage protection (Tamper)
- closing the enclosure lock
- convection cooling
- warranty 5 years from the production date

General description

The buffer power supply has been designed for an uninterrupted supply of fire alarm systems, smoke and heat control systems, fire protection equipment and fire automatics requiring stabilized voltage of 24V DC (± 15%). The PSU is fitted with two independently protected outputs AUX1 and AUX2, which supply voltage of **27.6 V DC** with a total output current:

Continuous operation Output current Imax a=3,5A

Instantaneous operation Output current Imax b=5A

In case of power loss, the PSU switches to battery power, providing uninterruptible power supply.

The PSU is enclosed in a metal casing (color: RAL 3001 - red) with battery housing for two 28Ah/12V batteries. The PSU works with maintenance-free lead acid batteries made with AGM technology or gel technology.


EN54/LCD series power supply unit Power supply for fire alarm systems 27,6V DC



Current consumption 0,95A (construction) Power frequency 50Hz PSU's power 138W Efficiency 84% Output voltage at 20 °C 22,0V÷ 20,0V÷ 20,0V÷ Output current Contine Instant Maximal resistance of the battery circuit 300m (construction) Ripple voltage 90mV p Current consumption by the PSU I = 65m	-p max. A A – LCD panel backlight off	
Current consumption 0,95A (Power frequency 50Hz PSU's power 138W Efficiency 84% Output voltage at 20 °C 22,0V÷ 20,0V÷ 20,0V÷ Output current Contine Instant Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p Current consumption by the PSU I = 65m	2230V AC 27,6V DC – buffer operation 27,6V DC – battery-assisted operation uous operation: Imax a=3,5A aneous operation: Imax b=5A Dhm -p max. A A – LCD panel backlight off	
Power frequency 50Hz PSU's power 138W Efficiency 84% Output voltage at 20 °C 22,0V÷ Output current Contin Instant Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p Current consumption by the PSU I = 65m	27,6V DC – buffer operation 27,6V DC – battery-assisted operation uous operation: Imax a=3,5A aneous operation: Imax b=5A Dhm p max. A A – LCD panel backlight off	
PSU's power 138W Efficiency 84% Output voltage at 20 °C 22,0V÷ 20,0V÷ 20,0V÷ Output current Contin Instant Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p Current consumption by the PSU I = 65m	27,6V DC – battery-assisted operation uous operation: Imax a=3,5A aneous operation: Imax b=5A Dhm -p max. A A – LCD panel backlight off	
Efficiency 84% Output voltage at 20 °C 22,0V÷ Output current Contine Instant Maximal resistance of the battery circuit Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p I = 65m I = 55m	27,6V DC – battery-assisted operation uous operation: Imax a=3,5A aneous operation: Imax b=5A Dhm -p max. A A – LCD panel backlight off	
Output voltage at 20 °C 22,0V÷ Output current Contin Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p Current consumption by the PSU I = 65m	27,6V DC – battery-assisted operation uous operation: Imax a=3,5A aneous operation: Imax b=5A Dhm -p max. A A – LCD panel backlight off	
Output current Continuinstant Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p I = 65m I = 65m Current consumption by the PSU I = 55m	uous operation: Imax a=3,5A aneous operation: Imax b=5A Dhm Imp max. A A LCD panel backlight off	
Instant Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p I = 65m Current consumption by the PSU I = 55m	aneous operation: Imax b=5A Dhm p max. A A – LCD panel backlight off	
Maximal resistance of the battery circuit 300m C Ripple voltage 90mV p Current consumption by the PSU 1 = 65m	Dhm -p max. A A – LCD panel backlight off	
Ripple voltage 90mV p I = 65m I = 65m Current consumption by the PSU I = 55m	-p max. A A – LCD panel backlight off	
Current consumption by the PSU I = 65m I = 55m I = 55m	A A – LCD panel backlight off	
Current consumption by the PSU I = 55m	A – LCD panel backlight off	
	I = 55mA – LCD panel backlight off	
during battery-assisted operation Caution	! If the power supply is connected with the communication interface or	
	odule, additional current consumption should be considered.	
Battery charging current 1,5A		
Coefficient of temperature compensation of the -40mV/	°C (-5 °C ÷ 40 °C)	
battery voltage		
11>30.5	23V, during battery mode V±0.5V - disconnection of the output voltage (AUX+ disconnection).	
Uvervoltage protection UVP	tic return	
	F _{AUX1} , F _{AUX2} melting fuse (failure requires fuse replacement)	
· · · · · · · · · · · · · · · · · · ·	re - Software	
Battery circuit protection SCP and reverse	F _{BAT} melting fuse (failure requires fuse replacement)	
polarity connection		
	(± 2%) – battery disconnection	
······································	vitch TAMPER	
Technical outputs:	electronic, max 50mA/30V DC, galvanic isolation 1500V _{RMS}	
	time approximately 10s/1m/10m/30m (+/-5%) – configured from the	
control		
	electronic, max 50mA/30V DC, galvanic isolation 1500V _{RMS}	
- PSU FLT; indicating PSU failure		
- ALARM; indicating collective failure		
	"ON" – 10÷30V DC	
	"OFF" – 0÷2V DC	
	f galvanic isolation 1500V _{RMS}	
	0V DC /50V AC	
- LEDS - LCD p	on the PCB of the power supply unit,	
· · · · · · · · · · · · · · · · · · ·	dings of electrical parameters, including: voltage, current, resistance of	
	circuit, mains supply voltagefailure indication	
	figuration of the PSU settings from the control panel	
	evels of password protected access	
• ope	eration memory of the PSU – 6144 values	
	ure memo - 2048 events	
	I time clock with battery backup	
	electric indicator ~75dB /0,3m	
	ım battery, CR2032	
Fuses: - F _{MAINS} T 6,3A	/ 250\/	
- F _{MAINS} Т 6,3А - F _{BAT} F 10А /		
- Faux1 F 6,3A		
- F _{AUX2} F 6,3A		
- USB-	TTL "INTU" interface; USB-TTL communication	
	5 "INTR" interface; RS485 communication	
Additional edulpment	RS485 "INTUR" interface; USB-RS485 communication	
(not included) - Etherr	net "INTE" interface; Ethernet communication INTW" interface; WiFi wireless communication	
	5-Ethernet "INTRE" interface; RS485-Ethernet communication	
	5-WiFi "INTRW" interface; RS485-WiFi wireless communication	
	<i>i</i> ronmental class (EN12101-10:2007), -5 °C÷75 °C	
Enclosure Steel pl	ate DC01 1,2mm, color: RAL 3001 (red)	
	20 x 182 (WxHxD) [mm] (+/- 2)	
Net/gross weight 11,1/12	,7 kg	
	/12V (SLA) max. H1	
Fitting battery 400 x 1	80 x 175mm (WxHxD) max W	
	D	
Closing Key loc		
	ate of constancy of performance CNBOP-PIB No 1438-CPR-0385,	
Certificates, declarations, warranty	te of approval CNBOP-PIB No 2174/2014,	
	HS, 5 years from the production date	
	closure does not adjoin the mounting surface so that cables can be led. tion cooling.	
Convec		

Pulsar

Parameters remote control system. (additional modules required)

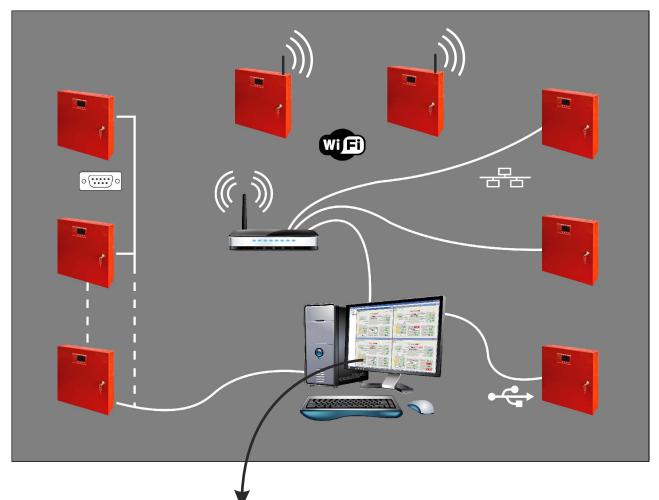

C PowerSecurity				
Power Supplies Window				
Area1	🗢 PSU1			
@ PSU2	Preview Charts History	Preview Charts History		
Area2	Q 14	Q 18		
· · · · · · · · · · · · · · · · · · ·	RED POWER	RED POWER		
	FAUX1	FAUX1		
	AC EN54 AUX	AC EN54 AUX		
	228V 27,6V/3A 1 27,6V	228V 27,6V / 5A 1 27,6V		
	FBAT FAUX2	FBAT FAUX2		
	2 27,5V	2 27,6V		
	Σ 2,6A	Σ 3,1A		
	BAT	BAT		
	U 27,7V C EXTO EPS	U 27,6V CNC EXTO EPS		
	T 26°C on PSU	T 26°C on PSU		
	R 0,12Ω EXTI APS	R 0,12Ω EXTi APS		
	TEST TAMPER Alarm	TEST TAMPER Alarm		
	PSU3 Preview Charts History	O PSU4 Preview Charts History		
	RED POWER	RED POWER		
	EIN34			
	229V 27,6V / 2A 1 27,6V	230V 27,6V / 7A 1 0,0V		
	FBAT FAUX2 2 27,6V	P BAL 2 27,5V		
	227,00			
	Σ 1,8Α	Σ 3,2A		
		DAT		
	ВАТ	BAT		
	U 27,6V T 26°C On PSU	U 27,7V T 26°C on EPS		
	U 27,6V T 26°C On PSU R 0,11Ω EXTi APS	U 27,7V T 26°C on EPS R 0,11Ω EXTi APS		
	U 27,6V T 26°C On PSU	U 27,7V T 26°C on EPS		

EN54/LCD series power supply unit Power supply for fire alarm systems 27,6V DC

Pulsar


Remote monitoring (options: Wi-Fi, Ethernet, RS485, USB).

The PSU has been adjusted to operate in a system that requires a remote control of the parameters in a monitoring centre. Transmitting data concerning PSU status is possible due to an additional, external communication module responsible for communication in Wi-Fi, Ethernet or RS485 standard. It is possible to connect the PSU and the computer via the USB –TTL interface.

Different connection topologies, presented later in this chapter, are only a part of possible communication schemes. More examples can be found in the manuals dedicated to individual interfaces.

Communication via the USB-TTL interface.


The easiest way of communication between the PSU and the computer is provided by the USB-TTL "INTU" interface. This interface allows direct connection between the computer and the PSU and is recognizable by the operating system as a virtual COM port.

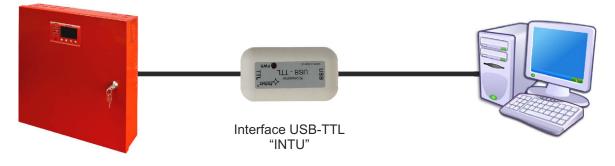

USB-TTL communication using the USB-TTL "INTU" interface.

RS485 network communication.

Another type of network communication is the RS485 communication using two-wire transmission path. To achieve this kind of data exchange, the PSU should be equipped with the additional RS485 TTL "INTR" interface, converting data from the PSU into the RS485 standard and the USB-RS485 "INTUR" interface, converting data from the RS485 network to the USB. Offered interfaces are galvanically isolated and protected against surges.

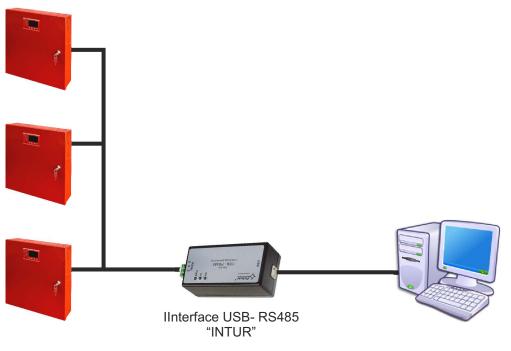


RS485 communication using the "INTR" and "INTUR" interfaces.




ETHERNET network communication.

Communication in the Ethernet network is possible due to the additional interfaces: Ethernet "INTE" and RS485-ETH "INTRE", according to the IEEE802.3 standard.

The Ethernet "INTE" interface features full galvanic isolation and protection against surges. It should be mounted inside the enclosure of the PSU.

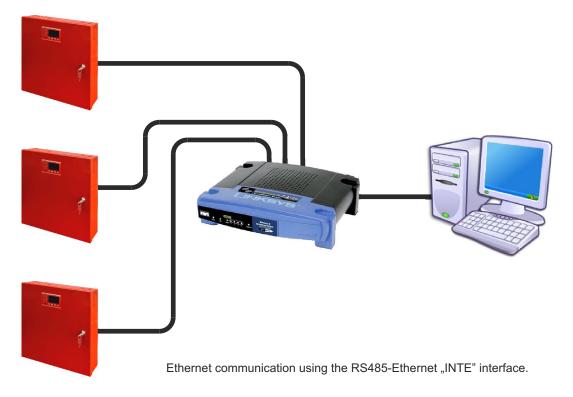

The RS485-ETHERNET "INTRE" interface is a device used to convert signals between the RS485 bus and the Ethernet network. For proper operation, the unit requires an external power supply in the range of 10÷30V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

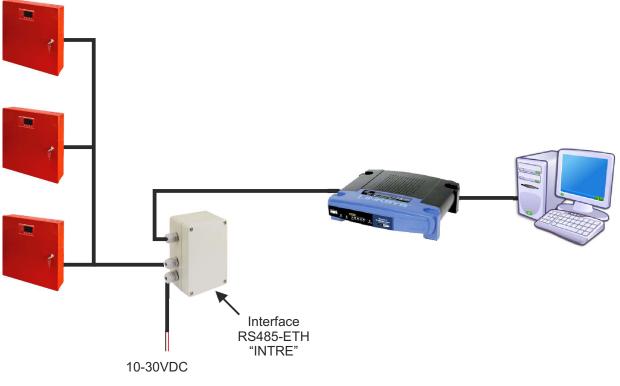


Ethernet communication using the RS485-Ethernet "INTRE" interface.


Pulsar

The Wi-Fi wireless communication.

The Wi-Fi wireless communication can be implemented on the basis of additional interfaces: WI-Fi 'INTW' and RS485-WiFi, operating within 2,4GHz frequency band, according to the IEEE 802.11 bgn standard. The WiFi 'INTW' interface shall be mounted in a selected location inside the enclosure so that the antenna is exposed to the outside.

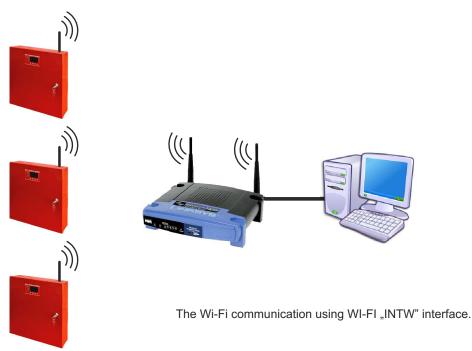

The RS485-WiFi "INTRW" interface is a device used to convert signals between the RS485 bus and the WiFi network. For proper operation, the unit requires an external power supply in the range of 10÷30V DC e.g. drawn from a PSU of the EN54 series. The physical connection of the interface takes place under galvanic isolation. The unit is mounted in a hermetic enclosure protecting against adverse environmental conditions.

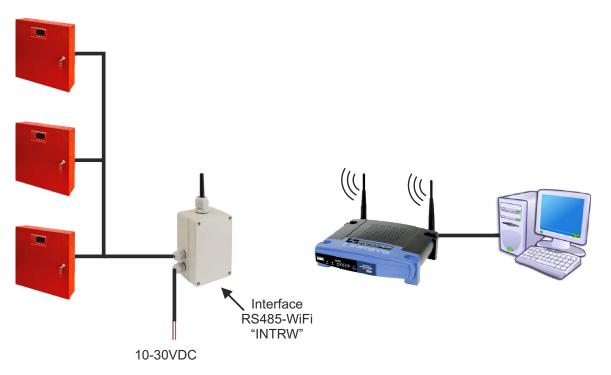


The The Wi-Fi communication using the RS485-WIFI "INTRW" interface.




Fuse modules EN54-LB4 end EN54-LB8

Fuse modules EN54-LB4 end EN54-LB8 allow to connect 4 or 8 receivers to the PSU. Output state is indicated by green LEDs.

Blown fuse signal is transmitted to the input of collective failure EXTi (ALARM) and saved in the internal memory of PSU. The PSU's relay output can also be used for remote control, including external optical indication.

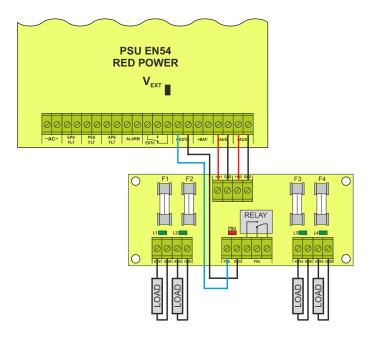

The connection of fuse module: EN54-LB4.

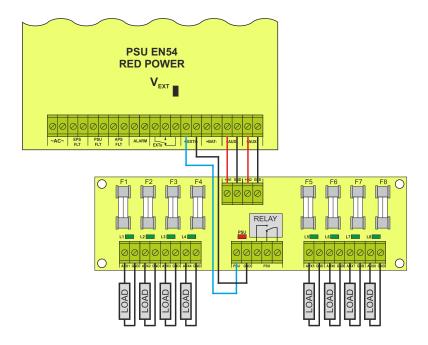

The connection of fuse module: EN54-LB8.