





# NS4702-24P-4S-4X Quick Start Guide

<b>Copyright</b>	<p>© 2014 United Technologies Corporation</p> <p>Interlogix is part of UTC Building &amp; Industrial Systems, Inc. a unit of United Technologies Corporation. All rights reserved.</p>
<b>Trademarks and patents</b>	<p>The NS4702-24P-4S-4X name and logo are trademarks of United Technologies.</p> <p>Other trade names used in this document may be trademarks or registered trademarks of the manufacturers or vendors of the respective products.</p>
<b>Manufacturer</b>	<p>Interlogix</p> <p>3211 Progress Drive, Lincolnton, NC 28092 USA</p> <p>Authorized EU manufacturing representative: UTC Climate Controls &amp; Security B.V., Kelvinstraat 7, 6003 DH Weert, Netherlands</p>
<b>Intended use</b>	<p>Use this product only for the purpose it was designed for; refer to the data sheet and user documentation for details. For the latest product information, contact your local supplier or visit us online at <a href="http://www.interlogix.com">www.interlogix.com</a>.</p>
<b>Certification</b>	<p>  N4131</p>
<b>FCC compliance</b>	<p>This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.</p> <p>You are cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p>
<b>ACMA compliance</b>	<p><b>Notice!</b> This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.</p>
<b>Canada</b>	<p>This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.</p>
<b>European Union directives</b>	<p><b>2004/108/EC (EMC Directive):</b> Hereby, UTC Building &amp; Industrial Systems, Inc. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC.</p>
<b>Contact Information</b>	<p>For contact information, see <a href="http://www.interlogix.com">www.interlogix.com</a> or <a href="http://www.utcssecurityproducts.eu">www.utcssecurityproducts.eu</a>.</p>

## Table of Contents

1. PACKAGE CONTENTS .....	4
2. REQUIREMENTS.....	5
3. TERMINAL CONNECTION .....	6
4. LOGON TO CONSOLE.....	7
5. CONFIGURING IP ADDRESS .....	7
6. STARTING WEB MANAGEMENT .....	10
7. SAVING CONFIGURATION .....	13
8. RECOVERING BACK TO DEFAULT CONFIGURATION .....	15
9. CUSTOMER SUPPORT .....	16

## 1. Package Contents

Thank you for purchasing NS4702-24P-4S-4X , L2+ 24-Port 10/100/1000Mbps 802.3at PoE + 4-Port 10G SFP+ Managed Switch with Hardware Layer3 IPv4/IPv6 Static Routing, NS4702-24P-4S-4X. “**Managed Switch**” mentioned in this Guide refers to the NS4702-24P-4S-4X.

Open the box of the Managed Switch and carefully unpack it. The box should contain the following items:

- ◆ **The NS4702-24P-4S-4X Managed Switch x 1**
- ◆ **User's Manual CD x 1**
- ◆ **Quick Installation Guide x 1**
- ◆ **RJ-45 to RS232 Cable x 1**
- ◆ **Rubber Feet x 4**
- ◆ **Two Rack-mounting Brackets with Attachment Screws x 1**
- ◆ **Power Cord x 1**
- ◆ **SFP Dust Cap x 8**

If any item is found missing or damaged, please contact your local reseller for replacement.

## 2. Requirements

- Workstations running Windows XP/2003/Vista/7/8/2008, MAC OS X or later, Linux, UNIX, or other platforms are compatible with TCP/IP protocols.
- Workstations are installed with Ethernet NIC (Network Interface Card)
- **Serial Port Connection** (Terminal)
  - The above Workstations come with COM Port (DB9) or USB-to-RS-232 converter.
  - The above Workstations have been installed with terminal emulator, such as Hyper Terminal included in Windows XP/2003.
  - Serial cable -- one end is attached to the RS-232 serial port, while the other end to the console port of the Managed Switch.
- **Ethernet Port Connection**
  - Network cables -- Use standard network (UTP) cables with RJ-45 connectors.
  - The above PC is installed with Web Browser and JAVA runtime environment plug-in.


---

🔗 **Note:** It is recommended to use Internet **Explore 8.0** or above to access the Managed Switch. If the Web interface of the Managed Switch is not accessible, please turn off the anti-virus software or firewall and then try it again.

---

### 3. Terminal Connection


To configure the system, connect a serial cable to a COM port on a PC or notebook computer and to RJ-45 type of serial (console) port of the Managed Switch.

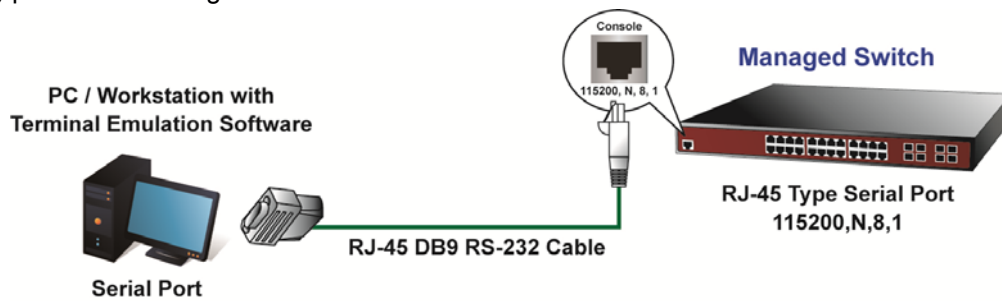

**Figure 3-1** Managed Switch Console Connectivity

A terminal program is required to make the software connection to the Managed Switch. Windows' **Hyper Terminal** program may be a good choice. The Hyper Terminal can be accessed from the **Start** menu.

1. Click **START**, then **Programs, Accessories** and then **Hyper Terminal**.
2. When the following screen appears, make sure that the COM port should be configured as:
  - ◆ **Baud** : 115200
  - ◆ **Data bits** : 8
  - ◆ **Parity** : None
  - ◆ **Stop bits** : 1
  - ◆ **Flow control** : None

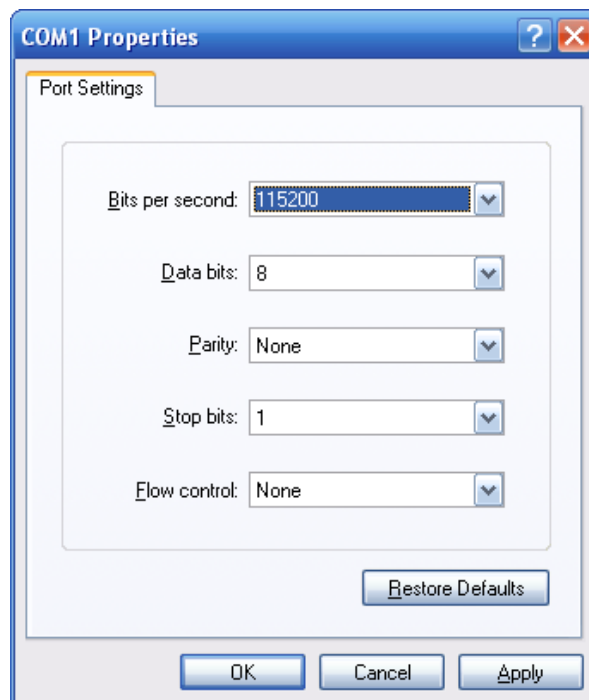

**Figure 3-2** Hyper Terminal COM Port Configuration

## 4. Logon to Console

Once the terminal is connected to the device, power on the Managed Switch and the terminal will display “running testing procedures”. Then, the following message asks to log-in user name and password. The factory default user name and password are shown as follows and the login screen in Figure 4-1 appears.

Username: **admin**

Password: **admin**

```
+RAM: 0x80000000-0x88000000 [0x800214a8-0x87fe0000 available]
FLASH: 0x40000000-0x40ffffff, 256 x 0x10000 blocks
== Executing boot script in 3.000 seconds - enter ^C to abort
> fis load -d managed
Image loaded from 0x80040000-0x80bdf644
> go

Press ENTER to get started

Username: admin
Password:
NS4702-24P-4S-4X #
```

**Figure 4-1:** Managed Switch Console Login Screen

The user can now enter commands to manage the Managed Switch. For a detailed description of the commands, please refer to the following chapters.

- 
1. For security reason, please change and memorize the new password after this first setup.
  2. Only accept command in lowercase letter under console interface.
- 

**Note:**

## 5. Configuring IP Address

The Managed Switch is shipped with default IP address shown below.

IP Address: **192.168.0.100**

Subnet Mask: **255.255.255.0**

To check the current IP address or modify a new IP address for the Switch, please use the procedures as follows:

### ■ Show the current IP Address

1. At the “#” prompt, enter “**show ip interface brief**”.
2. The screen displays the current IP address as shown in Figure 5-1.

```
+RAM: 0x80000000-0x88000000 [0x800214a8-0x87fe0000 available]
FLASH: 0x40000000-0x40ffffff, 256 x 0x10000 blocks
== Executing boot script in 3.000 seconds - enter ^C to abort
> fis load -d managed
Image loaded from 0x80040000-0x80bdf644
> go

Press ENTER to get started

Username: admin
Password:
NS4702-24P-4S-4X #
```

**Figure 5-1: IP Information Screen**

## ■ Configuring IP Address


3. At the “#” prompt, enter the following command and press **<Enter>** as shown in Figure 5-2.

```
NS4702-24P-4S-4X# configure terminal
NS4702-24P-4S-4X(config)# interface vlan 1
NS4702-24P-4S-4X(config-if-vlan)# ip address 192.168.1.100 255.255.255.
```

The previous command would apply the following settings for the Managed Switch.

IP Address: **192.168.1.100**

Subnet Mask: **255.255.255.0**

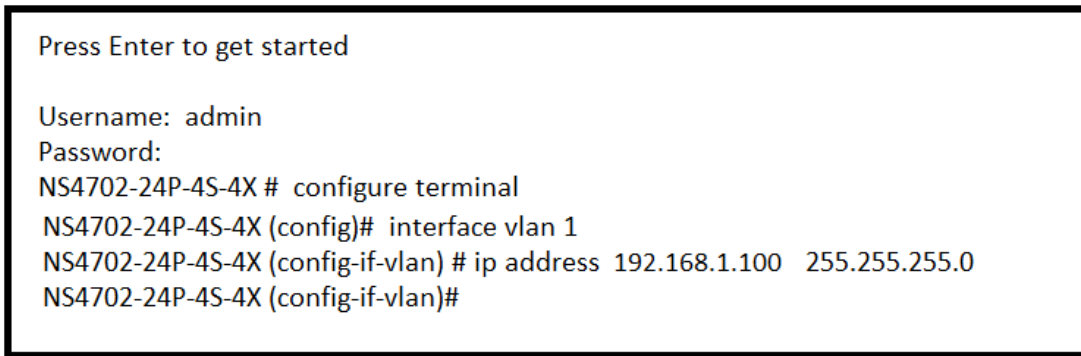

```
Press Enter to get started

Username: admin
Password:
NS4702-24P-4S-4X # configure terminal
NS4702-24P-4S-4X (config)# interface vlan 1
NS4702-24P-4S-4X (config-if-vlan) # ip address 192.168.1.100 255.255.255.0
NS4702-24P-4S-4X (config-if-vlan)#
```

**Figure 5-2: Configuring IP Address Screen**

4. Repeat step 1 to check if the IP address is changed.

## ■ Store current switch configuration

5. At the “#” prompt, enter the following command and press **<Enter>**.

```
# copy running-config startup-config
```



```
Press ENTER to get started
Username: admin
Password:
NS4702-24P-4S-4X # configure terminal
NS4702-24P-4S-4X (config) # interface vlan 1
NS4702-24P-4S-4X (config-if-vlan) # ip address 192.168.1.100 255.255.255.0
NS4702-24P-4S-4X (config) # exit
NS4702-24P-4S-4X # copy running-config startup-config
Building configuration ....
%Saving 2199 bytes to flash: startup-config
NS4702-24P-4S-4X #
```

**Figure 5-3:** Saving Current Configuration Command Screen

If the IP is successfully configured, the Managed Switch will apply the new IP address setting immediately.

You can access the Web interface of the Managed Switch through the new IP address.




If you are not familiar with the console command or the related parameter, enter “**help**” anytime in console to get the help description.

## 6. Starting Web Management

The following shows how to start up the **Web Management** of the Managed Switch. Note the Managed Switch is configured through an Ethernet connection. Please make sure the manager PC must be set on the same **IP subnet address**.

For example, the default IP address of the Managed Switch is **192.168.0.100**, then the manager PC should be set at **192.168.0.x** (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

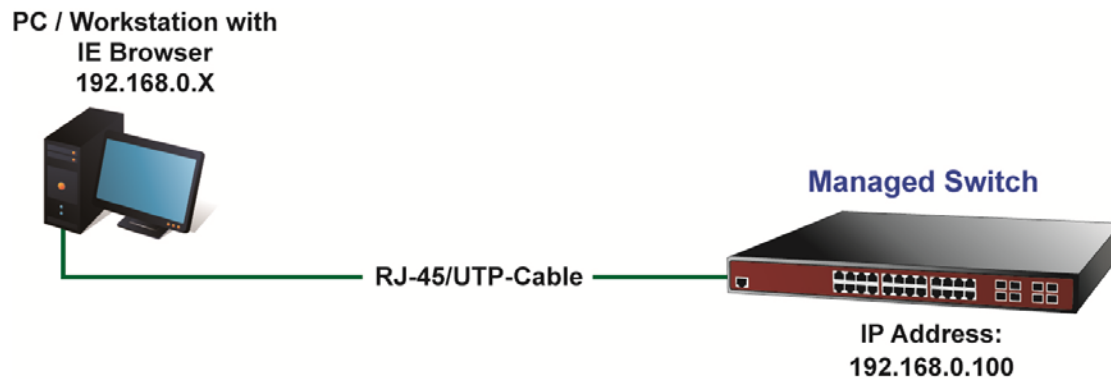

**Figure 6-1: IP Management Diagram**

## Logging in the Managed Switch

1. Use Internet Explorer 8.0 or above Web browser and enter IP address <http://192.168.0.100> (the factory default IP address or the one that you have just changed in console) to access the Web interface.
2. When the following dialog box appears, please enter the default user name and password “**admin**” (or the password you have changed via console). The login screen in Figure 6-2 appears.


Default Username: **admin**

Default Password: **admin**




**Figure 6-2:** Login Screen

3. After entering the password, the main screen appears as Figure 6-3 shows.

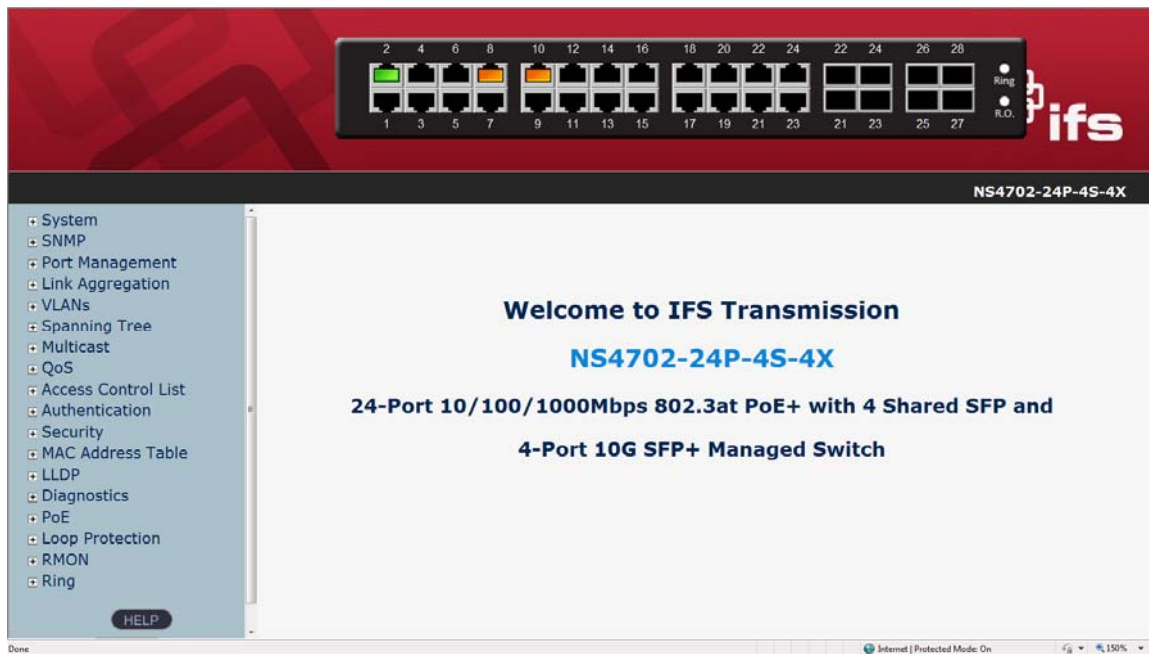

**Figure 6-3:** Web Main Screen of Managed Switch

The Switch Menu on the left of the Web page let you access all the commands and statistics the Managed Switch provides.

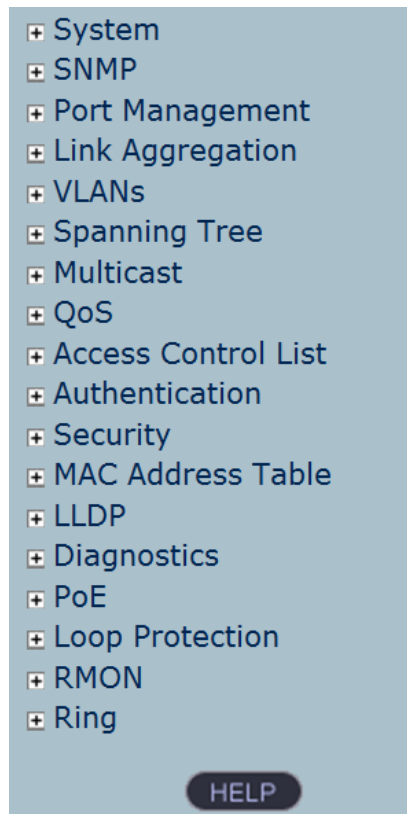

**Figure 6-4:** Switch Menu

**Note:** If you are not familiar with Switch functions or the related parameter, press **“Help icon”** anytime on the Web page to

---

get the help description.

---

Now, you can use the Web management interface to continue the Switch management or manage the Switch by console interface.


Please refer to the user's manual for more.

## 7. Saving Configuration

In the Managed Switch, the running configuration file is stored in the RAM. In the current version, the running configuration sequence of running-config can be saved from the RAM to FLASH by executing save startup config command, so that the running configuration sequence becomes the startup configuration file, which is called configuration save.

To save all applied changes and set the current configuration as a startup configuration. The startup-configuration file will be loaded automatically across a system reboot.

1. Click System, Save Startup Config.

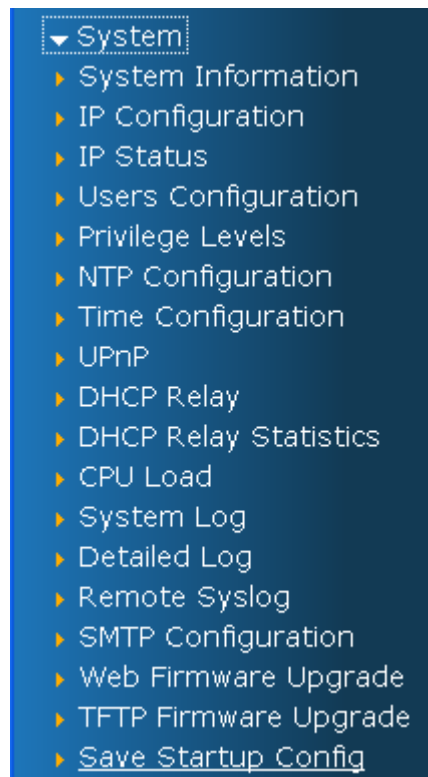

2. Press the **“Save Configuration”** button.

### Save Running Configuration to startup-config

Please note: The generation of the configuration file may be time consuming, depending on the amount of non-default configuration.

Save Configuration

## 8. Recovering Back to Default Configuration

### ■ IP Address has been changed or admin password has been forgotten –

To reset the IP address to the default IP Address “**192.168.0.100**” or reset the login password to default value, press the hardware **reset button** on the front panel for about **10 seconds**. After the device is rebooted, you can login the management WEB interface within the same subnet of 192.168.0.xx.



Reset Button

Figure 8-1: NS4702-24P-4S-4X Reset Button

## 9. Customer Support

Thank you for purchasing INTERLOGIX products. You can browse our online FAQ resource on the INTERLOGIX website first to check if it could solve your issue. If you need more support information, please contact [INTERLOGIX.com/support](http://INTERLOGIX.com/support) for the support team.

[www.interlogix.com/customer support](http://www.interlogix.com/customer%20support)